

# Copyrights/Disclaimer



## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## Documentation Copyrights

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

## Disclaimer

The information in this document is carefully examined, and is believed to be entirely reliable. However no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights nor the rights of others.

MOTOROLA, the Stylized M Logo, ASTRO, SmartZone, and Spectra are registered in the US Patent & Trademark Office. Call Alert, intelligence everywhere, Private Call, Private Conversation, TalkAround, and XTS are trademarks of Motorola, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2002.



Welcome




This is a generic sampling from the iEUTK (interactive End User Toolkit).

The complete XTS25000 II iEUTK containing over 200 slides will be tailored to the features and programming of each agency.



# Your Radio

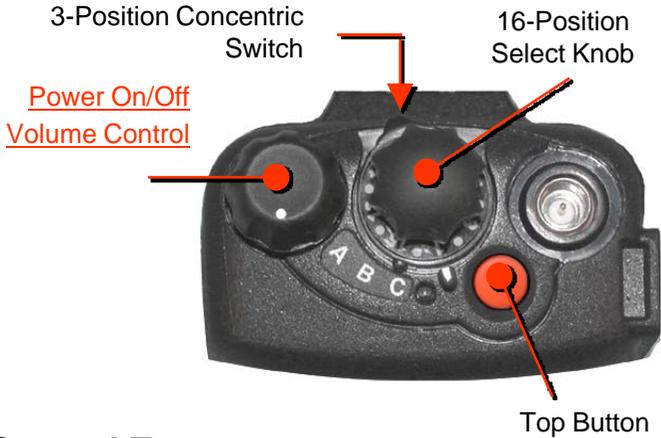


## Menu Options

- [Call Alert Page \(Respond\)](#)
- [Call Alert Page \(Send\)](#)
- [Channel/ Mode Select](#)
- [Clock \(Time and Date\)](#)
- [Direct/TalkAround](#)
- [ID Number \(View Your\) Using CALL](#)
- [ID Number \(View Your\) Using PAGE](#)
- [List View](#)
- [Nuisance Delete \(DEL Menu\)](#)
- [Nuisance Delete \(NUIS Menu\)](#)
- [Phone Call \(Place\)](#)
- [Phone Call \(Respond\)](#)
- [Power Select](#)
- [Private Conversation Call \(Place\)](#)
- [Private Conversation Call \(Respond\)](#)
- [Scan On/Off](#)
- [Scan List Edit](#)
- [Site Lock](#)
- [Site View/Search](#)
- [Smart Battery](#)
- [Status/Message Calls](#)
- [Talkgroup Calls](#)
- [Zone Select](#)

## Control Top

## Side Buttons

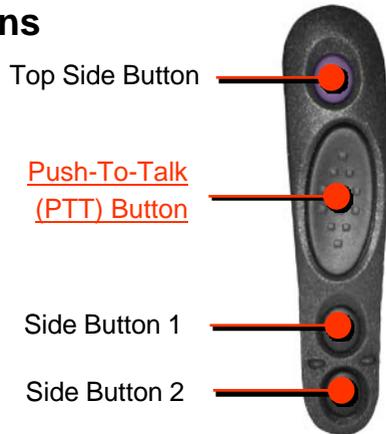

# Status Alert Tones



Tone Name	Tone Information
Acknowledge	 Receipt of a call sent to the central controller
Button Press	 A valid key was pressed on the keypad
Call Alert	 - Receipt of a Call Alert page sent to your radio - Confirmation receipt of a page received sent from your radio
Emergency	 Emergency alarm was sent from your radio
Failsoft	 Radio has lost communication with the central controller
Low Battery	 Weak battery indication
No Acknowledge	 A call to the central controller was not acknowledged
Out of Range	 Radio is out of range of the system
Power-up	 Radio has successfully powered on
Private Call I	 Receipt of a Private Conversation call sent to your radio
Private Call Enhanced	 Receipt of a Private Conversation call sent to your radio
Prohibit	 Talkgroup or channel is not accessible
System Busy	 Channel, system or target radio is busy
Talk Permit	 Channel is ready to use
Time-out Timer	 Time-out timer limit has been reached



# Zone Select (Menu)



## To select a zone:

1. Press the right side of the 4-way Navigation button until ZONE appears on the display.
2. Press the button directly below ZONE.  
*The zone name flashes on the display.*
3. Press the right side of the 4-way Navigation button to find the zone you want.  
*If the zone you selected is unprogrammed, repeat step 3.*
4. Press the Home button to confirm the displayed zone and channel.  
OR  
Press the PTT button to transmit on the displayed zone/channel.



## Quick Reference Cards (QRCs)



- **Motorola will also work with us to provide tailored QRCs (similar to the example on the next two pages).**
- **These are tri-folded, laminated and easily kept in your vehicle or clipboards for reference.**



## XTS 2500 Model II



### Emergency – Trunked Feature

When the radio has both emergency call and alarm features, it automatically proceeds to the call mode after the alarm is acknowledged.

1. Press the emergency button. The LED lights solid red, the display alternates between showing “EMERGENCY” and the current trunked zone and channel, and a short, medium-pitched emergency tone sounds.
2. Press the PTT button and announce your emergency.
3. After completing the emergency call, press and hold the emergency button for about a second, until you hear a continuous exit tone.

Print Date: 09/20/10

### Respond to a Call Alert Page – Trunked Feature

When a Call Alert page is received, you hear four repeating alert tones, the LED flashes green, the call received symbol (📞) flashes and PAGE RECEIVED is displayed.

1. Press any button or change channels to acknowledge the page and clear the alert from your radio.
2. Press the PTT button and proceed with your call to inquire about the page.

### Respond to a Private Conversation Call – Trunked Feature

When a Private Conversation Call is received, two alert tones are heard, the LED blinks green, the Call Received icon (📞) flashes, and the display reads “CALL RECEIVED.”

1. Press the Call Response button within 20 seconds. The last ID number received appears on the display.
2. Press the PTT button to talk, release to listen.
3. Press the Home button to exit the call.

### Direct/Talkaround (Conventional)

When you have a conventional or direct channel selected, you can talk directly to another unit without transmitting through a repeater.

1. Press the Direct button to enable this feature. The Direct icon “|→” will light. Make sure that the receiving unit has the same channel configuration selected. You will not receive normal talkgroup calls while in Direct mode.
2. Press the Direct button again to disengage the feature and return to normal radio operation. The Direct icon “|→” will disappear.

### Scan On/Off – Trunked Feature

1. Rotate the Scan switch to enable Scan. The Scan icon “🔍” will appear indicating Scan is active.
2. Rotate the Scan switch to disable Scan. The Scan icon “🔍” will disappear indicating Scan is no longer active.

### Scan List Edit

1. Press the arrow keys until PROG appears. Press the button below PROG.
2. This display shows the Lists available for programming: SCAN. Press the button below SCAN. The programming icon “☐” flashes.
3. The display will show the first member of the Scan List. Press the arrow keys until the desired item appears on the display. Press the button below SEL or DEL to add or delete the talkgroup from the Scan List.
4. Each press of the SEL button will cause:
  - a) The talkgroup to be added to the Scan List. The Scan icon “🔍” will appear when added.
  - b) A dot to appear next to the scan icon “🔍.” indicating the talkgroup is a Priority-Two talkgroup.
  - c) A flashing dot appears next the scan icon “🔍.” indicating the talkgroup is a Priority-One Talkgroup.
  - d) The talkgroup is deleted from the Scan List. The Scan icon “🔍.” will disappear.
5. Press the arrow keys to edit other list members.
6. Press the Home button to exit the Scan List Edit mode.

### Nuisance Delete

1. When a certain channel in the Scan List becomes overly intrusive during Scan, press the arrow keys until NUIS appears on the display.
2. Press the key below it to temporarily delete the displayed channel from the Scan List.
3. You can re-enable the channel by exiting and reentering Scan.

